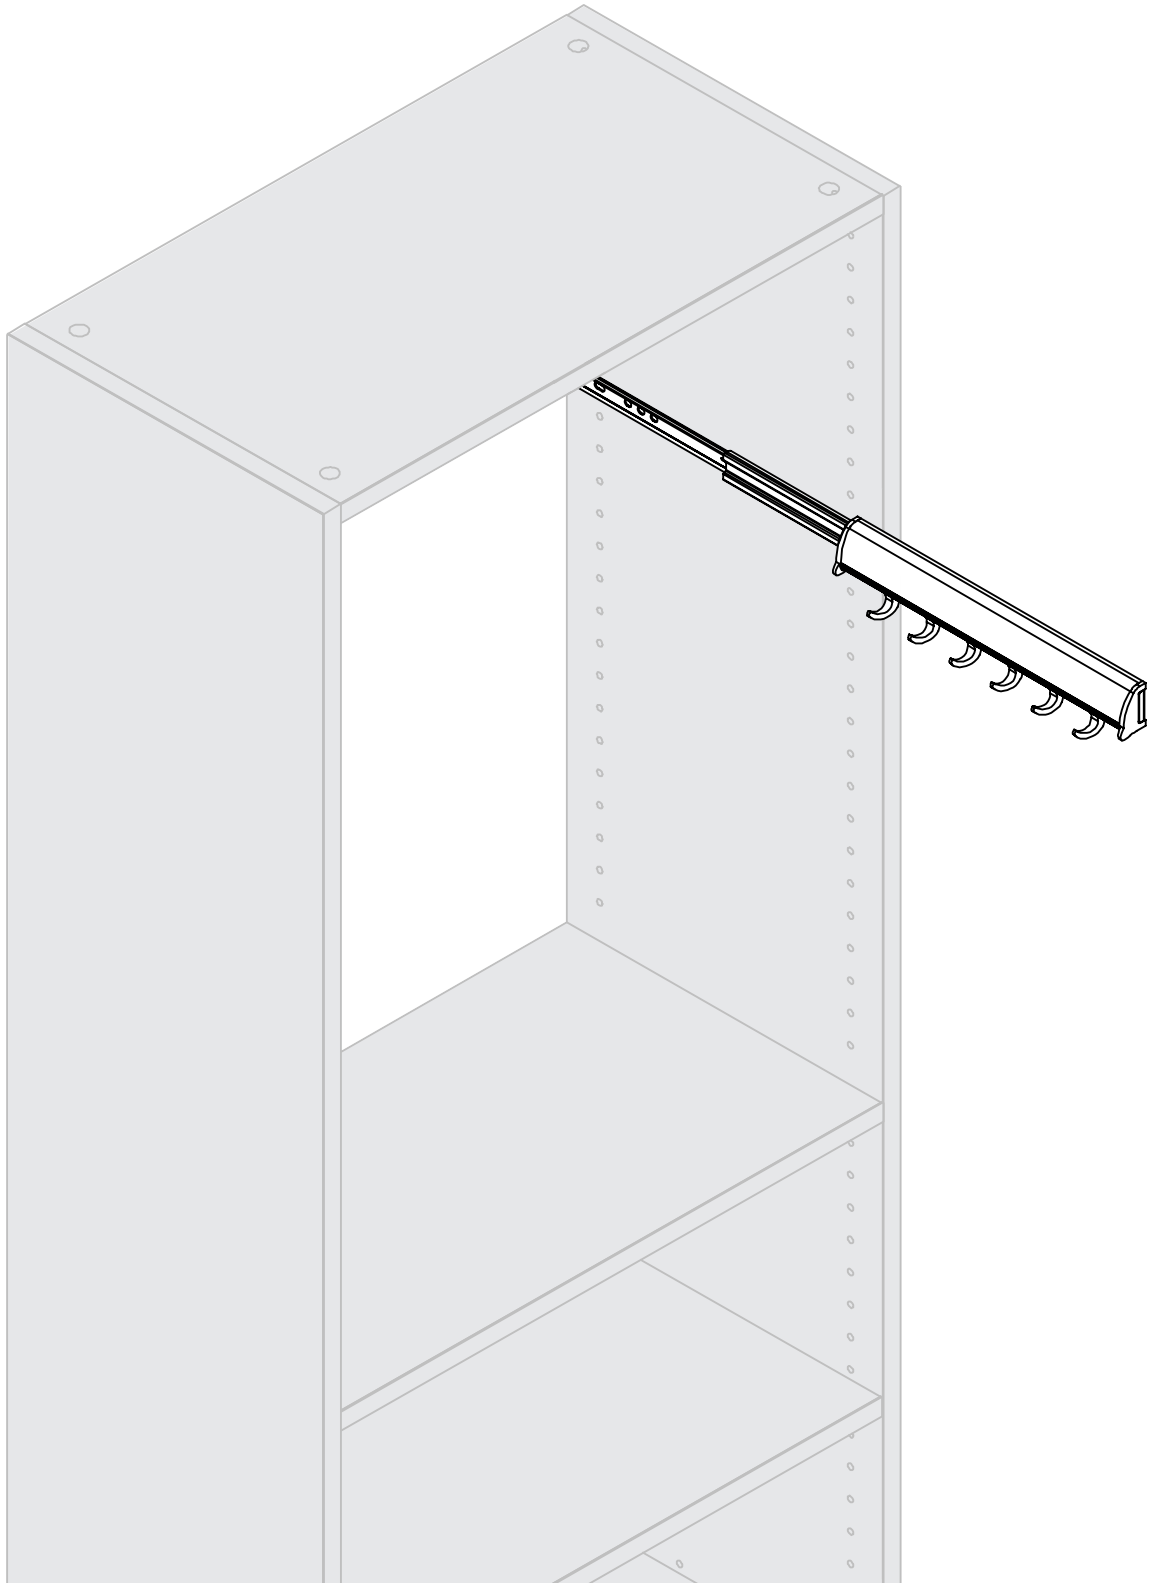
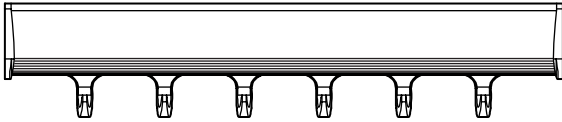

 

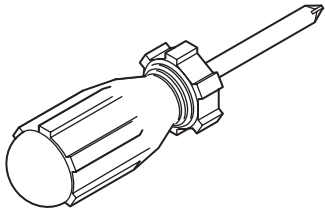



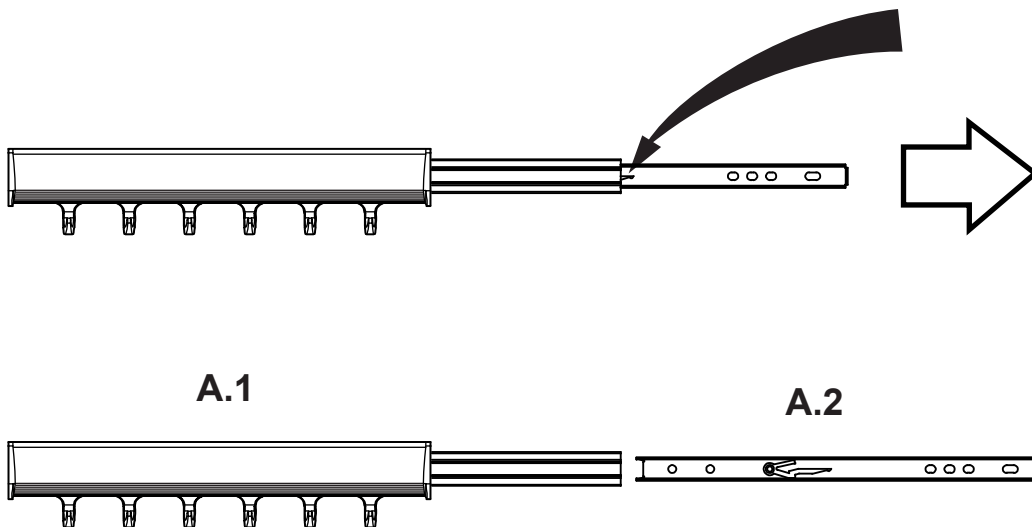
Belt Rack



Belt Rack

PARTS LIST	TOOLS REQUIRED
 <p>A Belt Rack (Qty 1)</p>    <p>E Euro Screw (Qty 2) F 5/8in Wood Screw (Qty 2) G Rack End Cap</p>	<p>(not included)</p> <p>#2 Phillips Driver</p>  

1

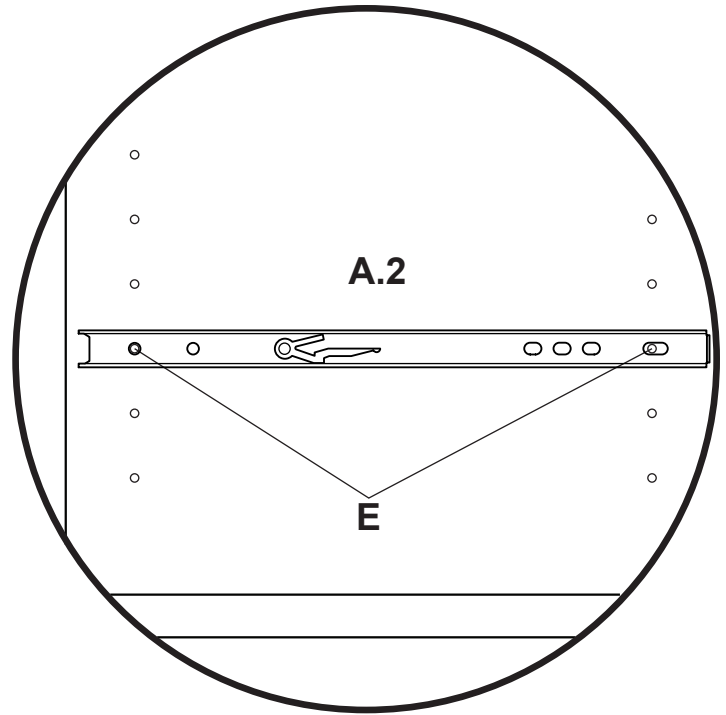


NOTE: Each Belt Rack is shipped assembled. To separate, lift the plastic catch on the Panel Side and pull the slide out of the Rack Side

2

2.1 For each Belt Rack, position the slide at desired height then line up the first and last holes with the corresponding shelf pin holes. Attach with supplied Euro Screws (E)

2.3 If mounting to the outside of a unit, use supplied wood screws (F)



2.2 Re-assemble the Belt Rack, insert the end cap and installation is complete

