


GARAGE PRODUCTS

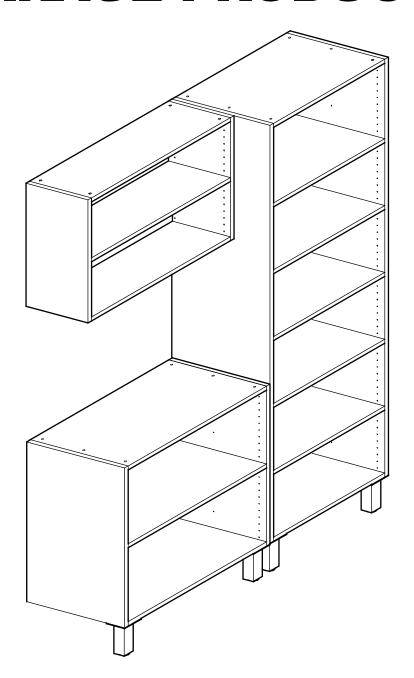

FULL LINE ASSEMBLY AND INSTALLATION INSTRUCTIONS



IMPORTANT! ABOUT THESE INSTRUCTIONS

THE INSTRUCTIONS PROVIDED IN THIS MANUAL ARE THE MOST CURRENT VERSIONS OF ASSEMBLY INSTRUCTIONS FOR THE PRODUCTS COVERED. THESE INSTRUCTIONS MAY DIFFER SLIGHTLY FROM THOSE PROVIDED WITH THE PRODUCT, AND IN SUCH CASES THE INSTRUCTIONS PROVIDED IN THIS MANUAL SHOULD BE FOLLOWED.

1-844-969-4247 support@modularclosets.com


Contents

Garage Base	
_	
_	
_	
Countertons	4

2 Contents




GARAGE BASE

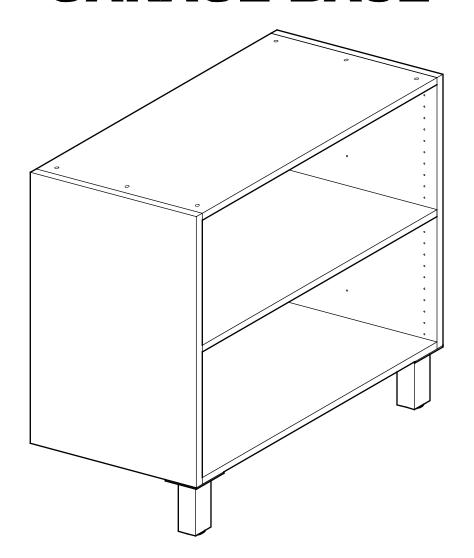

ASSEMBLY AND INSTALLATION INSTRUCTIONS




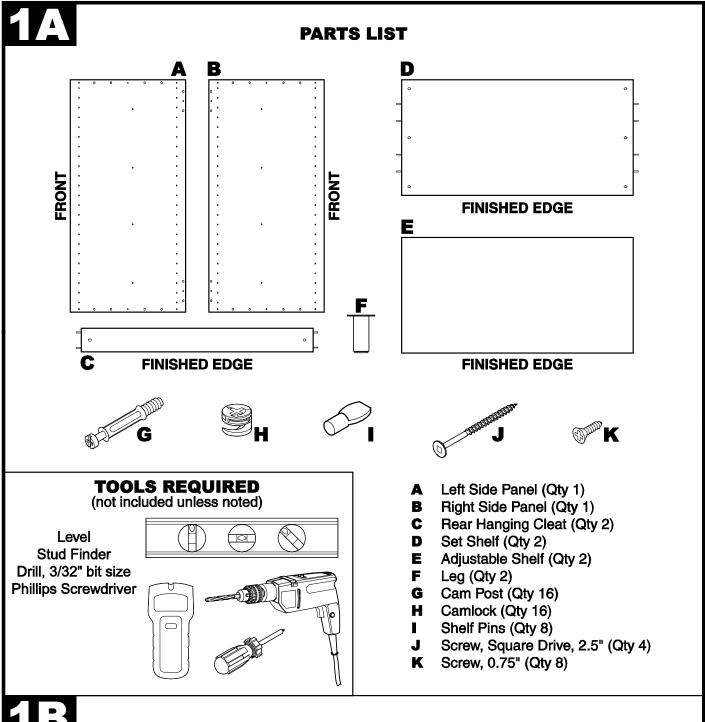

- 1.1 Lay parts out on a protective surface to prevent damage. Tip: Spread out the cardboard packaging to use as a protective surface.
- 1.2 Inventory parts against the Parts List. Make sure all parts are present before proceeding.



2

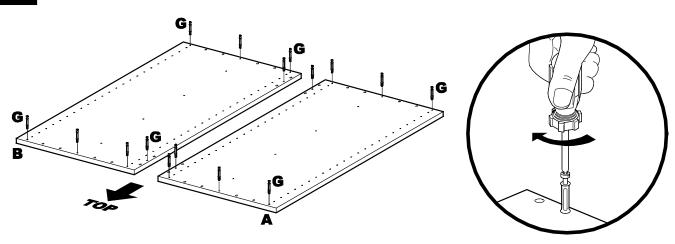

2.1 Install one Cam Post (G) into each of the eight holes on Left Side Panel (A) and Right Side Panel (B). Tighten until Cam Posts are seated against Side Panels.

3

3.1 Assemble Set Shelves (D) and Rear Hanging Cleats (C) onto Right Side Panel (B) by sliding the Shelves and Cleats onto the Cam Posts (G) on Side Panel. BE SURE dowel pins in Shelves and Cleats engage drilled holes in Side Panel, and all parts are pressed flush against Side Panel.


IMPORTANT NOTES

Install Set Shelves (D) with finished edges facing forward (toward front of unit).

Install Rear Hanging Cleats (C) with holes for Cam Locks facing out and the unfinished edge against the Set Shelf (D).

Install top Set Shelf (D) with holes for Cam Locks facing the top of the unit.

Install bottom Set Shelf (D) with holes for Cam Locks facing the bottom of the unit.

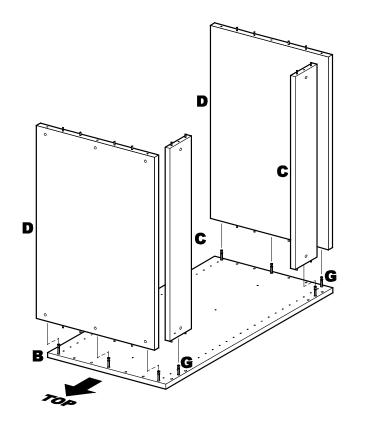


Garage Base

5




4


4.1 Install Left Side Panel (A) onto assembled Set Shelves (D) and Rear Hanging Cleats (C). BE SURE dowel pins in Shelves and Cleats engage drilled holes in Side Panel, and Side Panel is pressed flush against Set Shelves and Cleats.

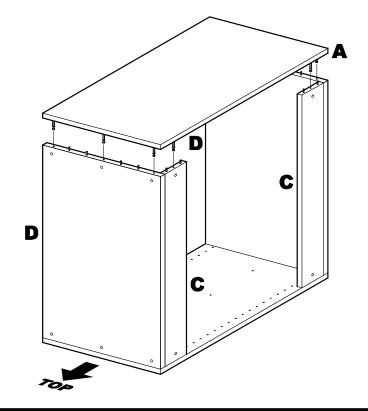


5

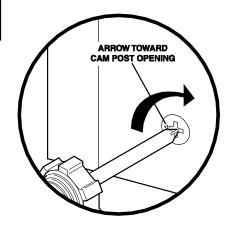

- 5.1 Insert Camlocks (H) in holes in Set Shelves (D) and Rear Hanging Cleats (C), with arrow pointing toward Cam Post opening. Be sure Camlocks engage Cam Posts, and are fully seated in Shelves and Cleats.
- **5.2** Tighten Camlocks (H) clockwise to lock.

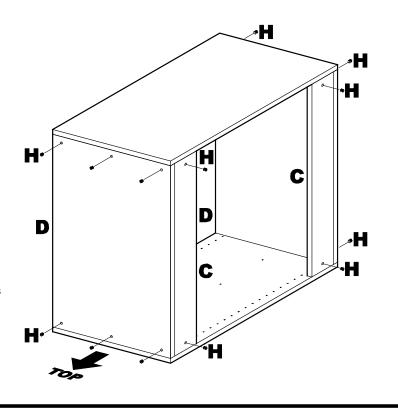


6

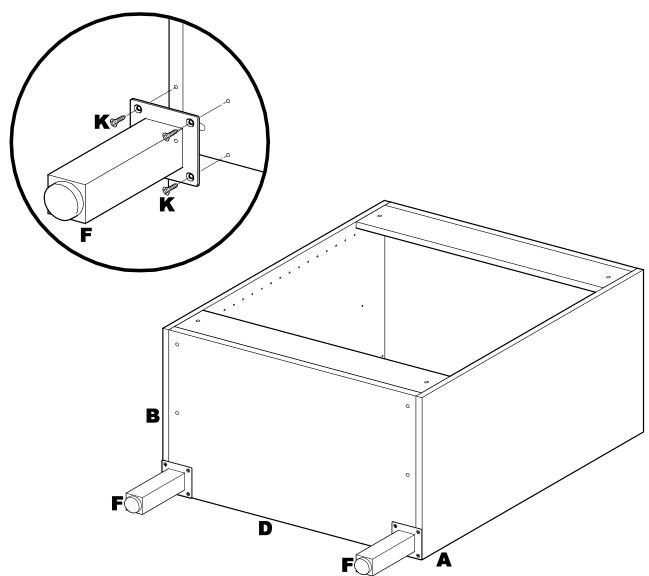

- **6.1** Lay the assembled cabinet face down.
- **6.2** Using the holes in the flange of Leg (F) as a template, align flange with drilled holes in bottom edges of Left Side Panel (A) and Right Side Panel (B) and drill pilot holes in lower Set Shelf (D) at two corners of cabinet.
- 6.3 Install two Legs (F) on assembled cabinet, and secure each Leg with four Screws (K).




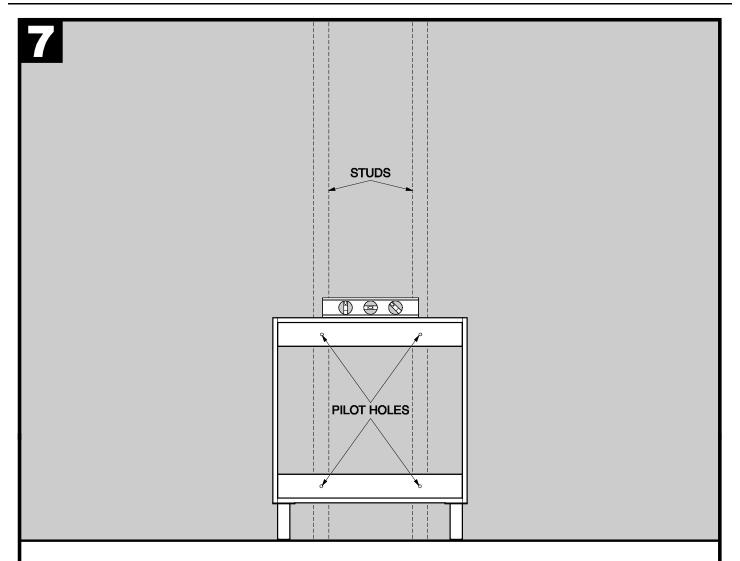

INSTALLATION


- 7.1 Determine the mounting location for the unit.
- 7.2 Using a stud finder, locate studs to which the unit will be secured. Mark stud locations with a pencil.
- 7.3 With the unit positioned at the desired location, level the unit, then drill pilot holes through Rear Hanging Cleats (C).



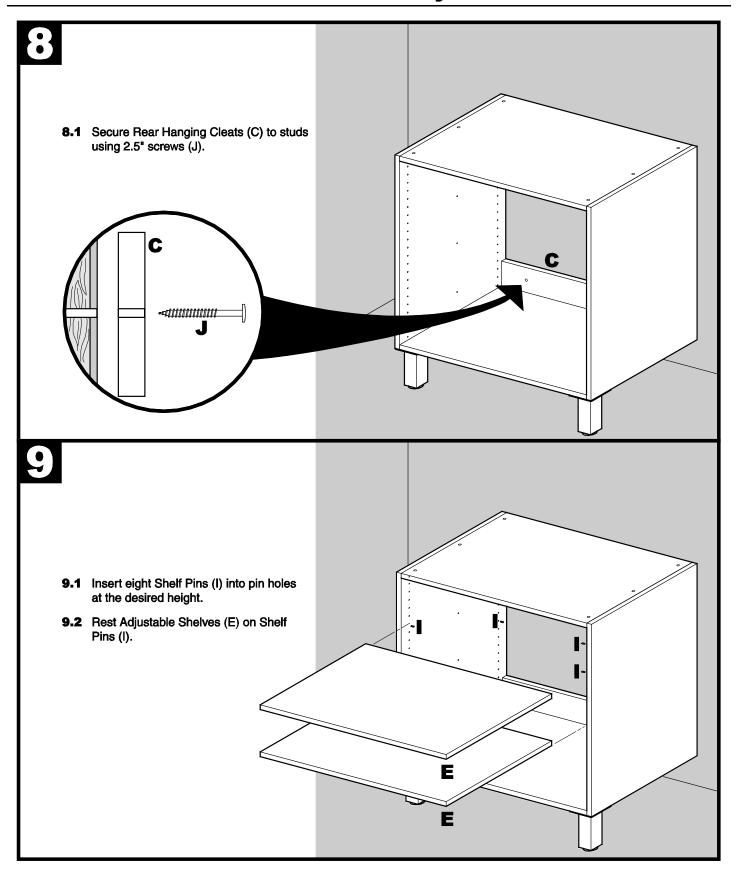




GARAGE TALL

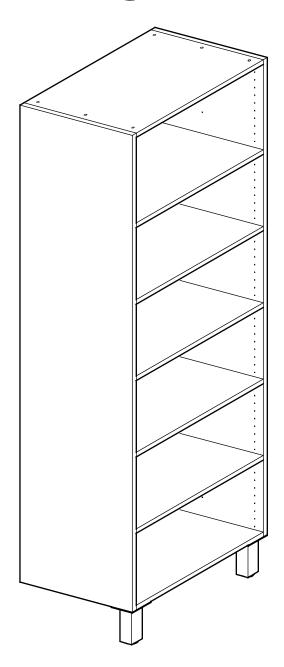

ASSEMBLY AND INSTALLATION INSTRUCTIONS



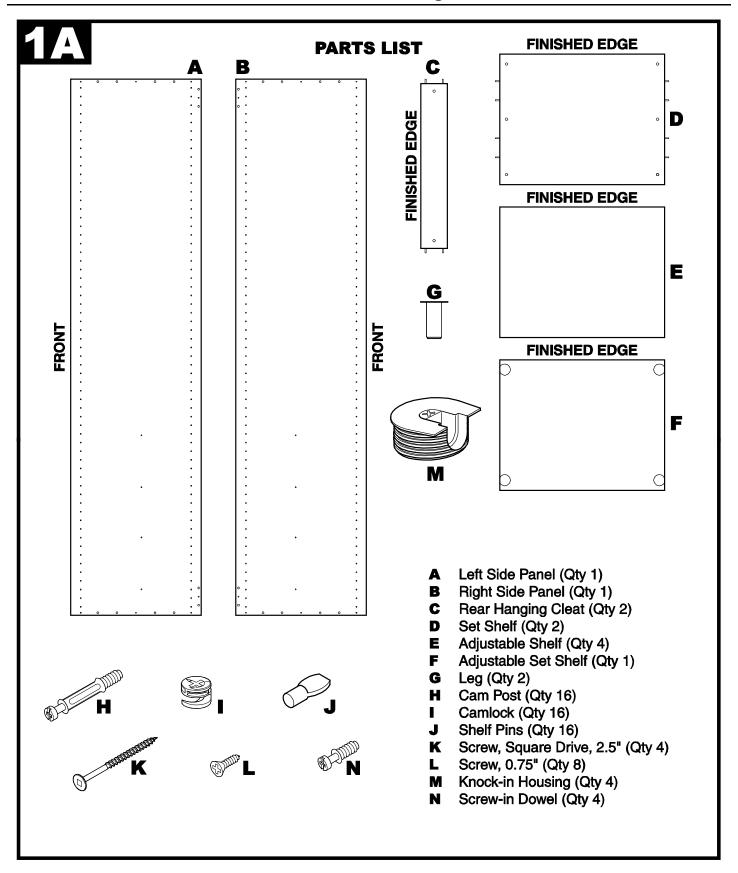



1B

NOTE: Parts are shipped in two or more cartons.


1.1 Lay parts out on a protective surface to prevent damage.


Tip: Spread out the cardboard packaging to use as a protective surface.

1.2 Inventory parts against the Parts List. Make sure all parts are present before proceeding.


TOOLS REQUIRED (not included unless noted)

Level Stud Finder Drill, 3/32" bit size Phillips Screwdriver

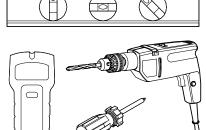

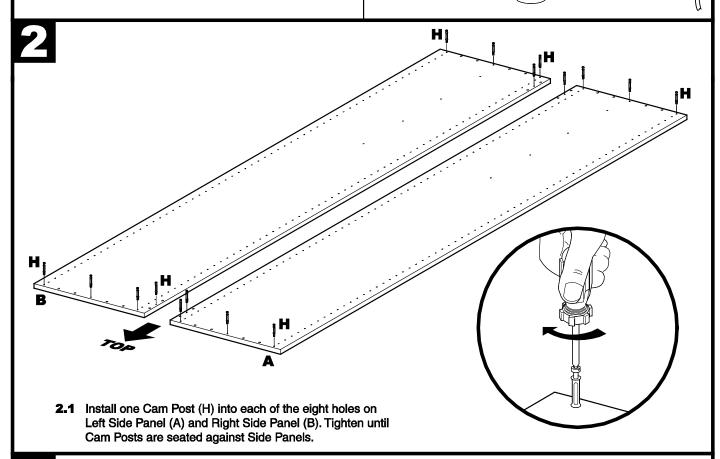


3

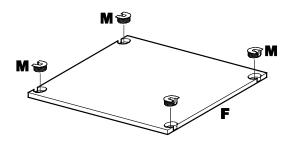

3.1 Insert four Knock-in Housings (M) into recesses in Adjustable Set Shelf (F). Gently tap each Knock-in Housing (M) into Adjustable Set Shelf (F) using a rubber mallet until lip on Knock-in Housing is flush with surface of Shelf.





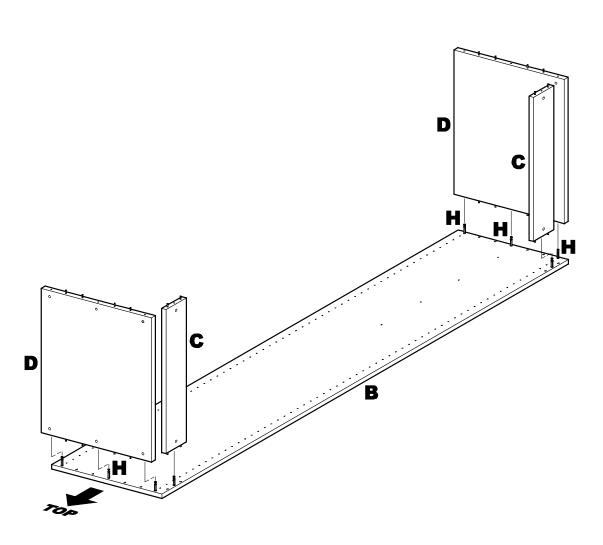

4.1 Assemble Set Shelves (D) and Rear Hanging Cleats (C) onto Right Side Panel (B) by sliding the Shelves and Cleats onto Cam Posts (H) on Right Side Panel. BE SURE dowel pins in Shelves and Cleats engage drilled holes in Right Side Panel, and all parts are pressed flush against Right Side Panel.

IMPORTANT NOTES

Install Set Shelves (D) with finished edge facing forward (toward front of unit).


Install Rear Hanging Cleats (C) with holes for Cam Locks facing rear of the unit and unfinished edge against Set Shelf (D).

Install upper Set Shelf (D) with holes for Cam Locks facing the top of the unit.

Install lower Set Shelf (D) with holes for Cam Locks facing the bottom of the unit.






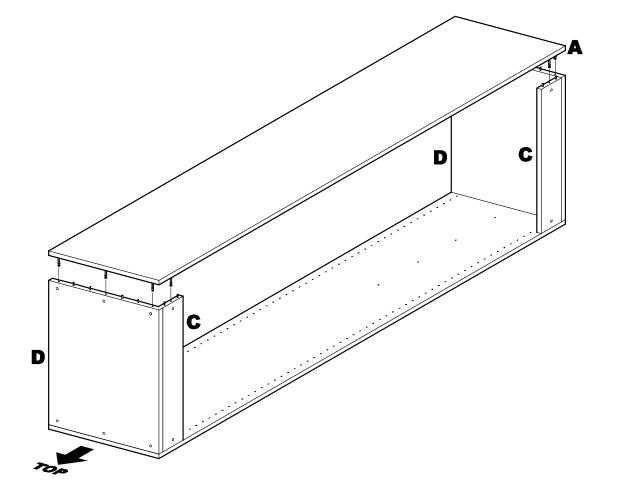

5.1 Install Left Side Panel (A) onto assembled Set Shelves (D) and Rear Hanging Cleats (C). BE SURE dowel pins in Shelves and Cleats engage drilled holes in Side Panel, and Side Panel is pressed flush against Set Shelves and Cleats.


6

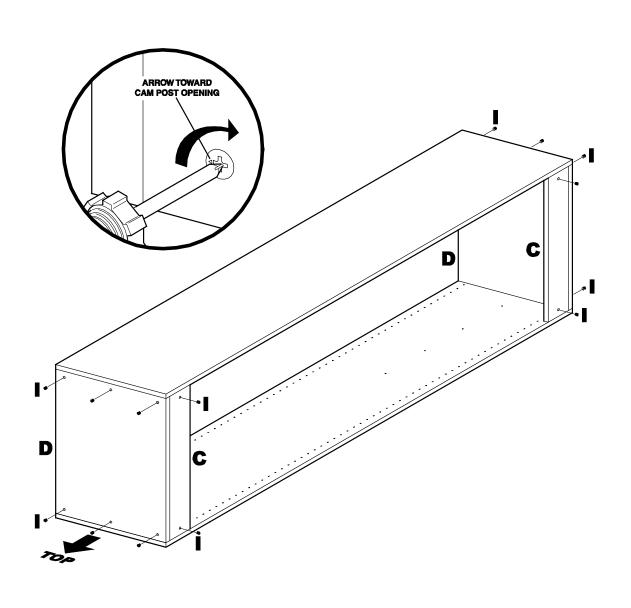

- **6.1** Insert Camlocks (I) in holes in Set Shelves (D) and Rear Hanging Cleats (C), with arrow pointing toward Cam Post opening. Be sure Camlocks engage Cam Posts, and are fully seated in Shelves and Cleats.
- 6.2 Tighten Camlocks (I) clockwise to lock.




7

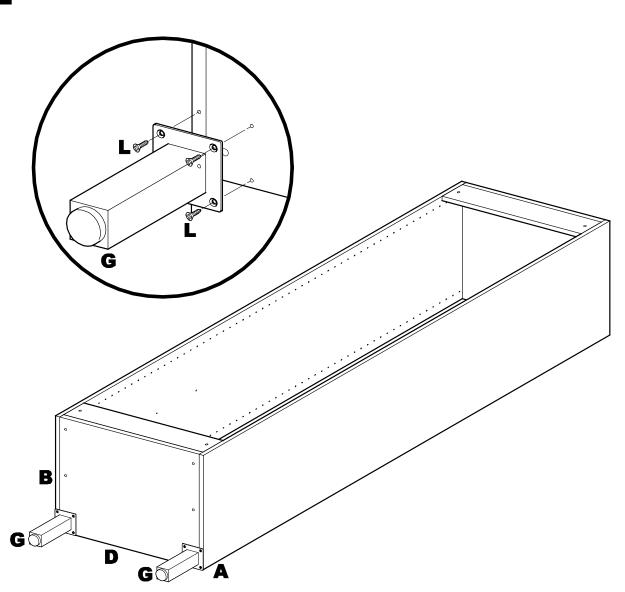

- 7.1 Lay the assembled cabinet face down.
- **7.2** Using the holes in the flange of Leg (G) as a template, align flange with drilled holes in bottom edges of Left Side Panel (A) and Right Side Panel (B) and drill pilot holes in lower Set Shelf (D) at two corners of cabinet.
- **7.3** Install two Legs (G) on assembled cabinet, and secure each Leg with four Screws (L).



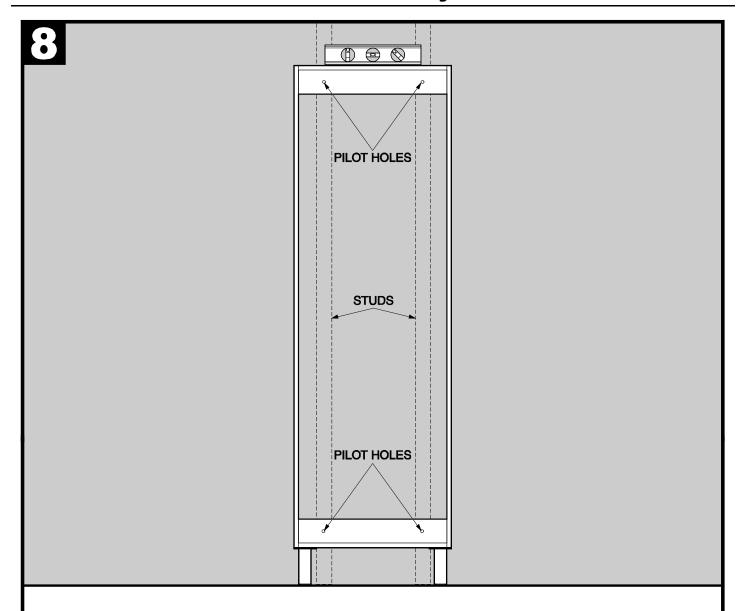


INSTALLATION


- **8.1** Determine the mounting location for the unit.
- 8.2 Using a stud finder, locate studs to which the unit will be secured. Mark stud locations with a pencil.
- 8.3 With the unit positioned at the desired location, level the unit, then drill pilot holes through Rear Hanging Cleats (C).

NOTE: Depending on the selected mounting location, is possible that only one stud will pass through the unit. In this case, use two screws through each Rear Hanging Cleat.




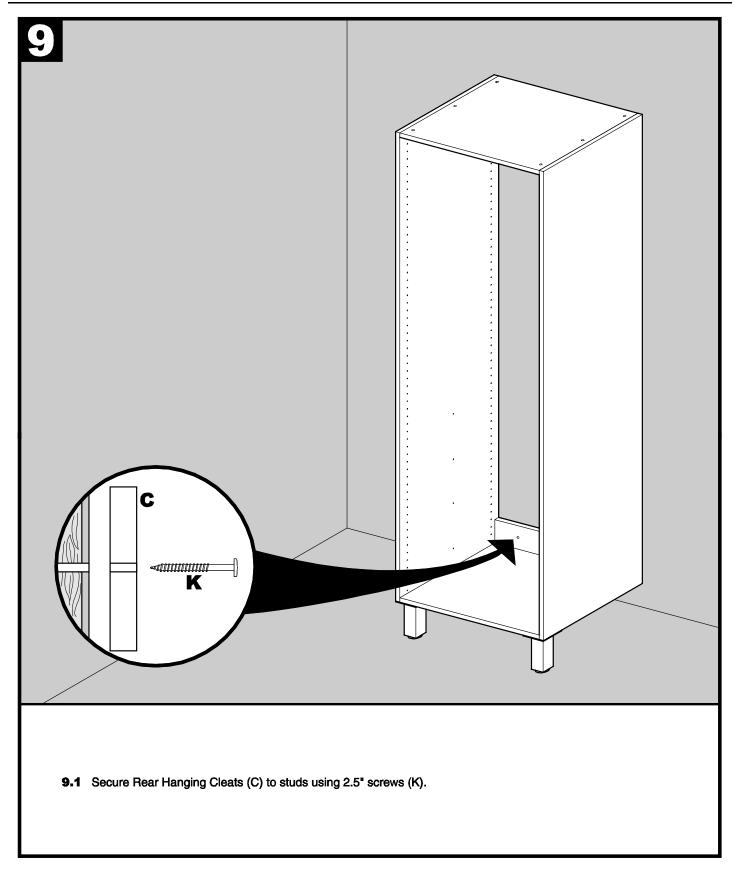



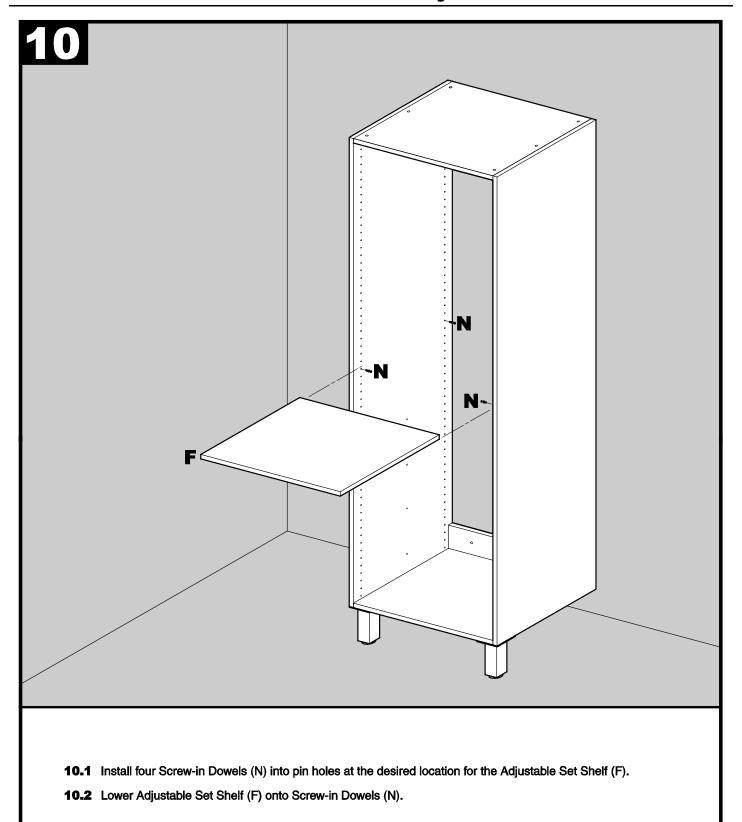




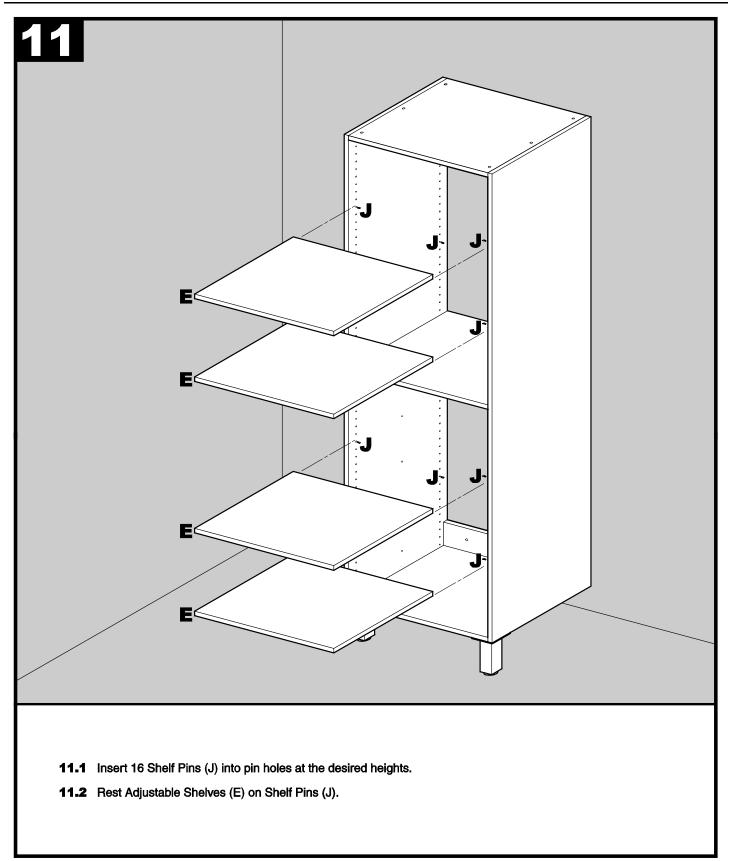



GARAGE WALL

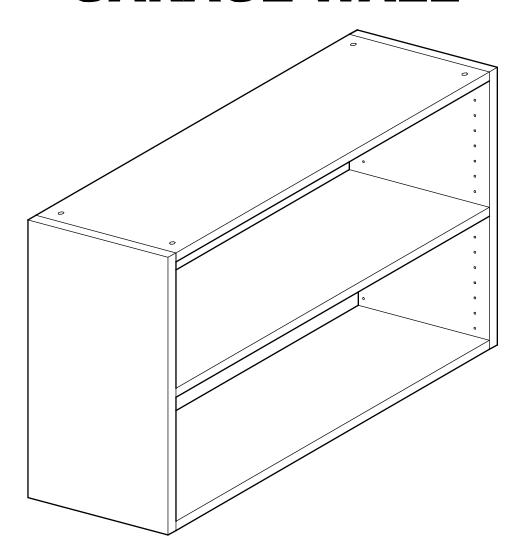


ASSEMBLY AND INSTALLATION INSTRUCTIONS



PARTS LIST FINISHED EDGE E **FINISHED EDGE FINISHED EDGE TOOLS REQUIRED** (not included unless noted) Left Side Panel (Qty 1) Right Side Panel (Qty 1) Rear Hanging Cleat (Qty 2) Level Stud Finder D Set Shelf (Qty 2) Drill, 3/32" bit size E Adjustable Shelf (Qty 1) Phillips Screwdriver Cam Post (Qty 12) Camlock (Qty 12) Shelf Pins (Qty 4) Screw, Square Drive, 2.5" (Qty 4)

- 1.1 Lay parts out on a protective surface to prevent damage. Tip: Spread out the cardboard packaging to use as a protective surface.
- 1.2 Inventory parts against the Parts List. Make sure all parts are present before proceeding.



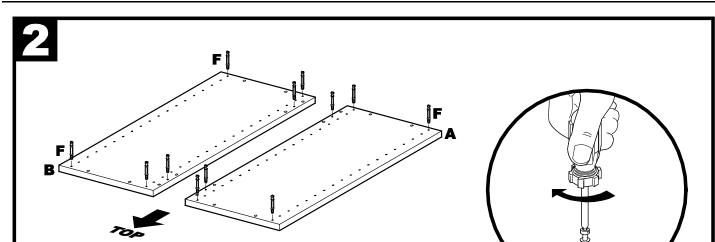

2.1 Install one Cam Post (F) into each of the sic holes on Left Side Panel (A) and Right Side Panel (B). Tighten until Cam Posts are seated against Side Panels.

3


3.1 Assemble Set Shelves (D) and Rear Hanging Cleats (C) onto Right Side Panel (B) by sliding the Shelves and Cleats onto the Cam Posts (F) on Side Panel. BE SURE dowel pins in Shelves and Cleats engage drilled holes in Side Panel, and all parts are pressed flush against Side Panel.

IMPORTANT NOTES

Install Set Shelves (D) with finished edges facing forward (toward front of unit).

Install Rear Hanging Cleats (C) with holes for Cam Locks facing the rear of the unit and the unfinished edge against the Set Shelf (D).


Install lower Set Shelf(D) with holes for Cam Locks facing the bottom of the unit.

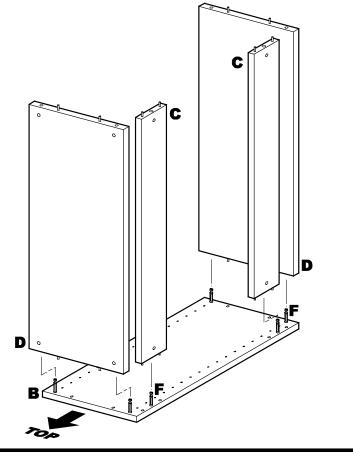







4.1 Install Left Side Panel (A) onto assembled Set Shelves (D) and Rear Hanging Cleats (C). BE SURE dowel pins in Shelves and Cleats engage drilled holes in Side Panel, and Side Panel is pressed flush against Set Shelves and Cleats.

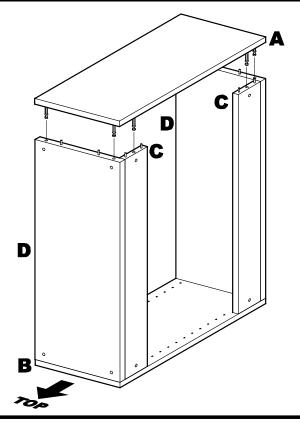


5

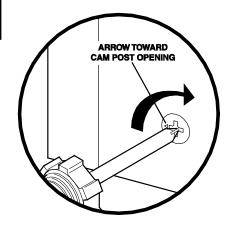

- 5.1 Insert Camlocks (G) in holes in Set Shelves (D) and Rear Hanging Cleats (E), with arrow pointing toward Cam Post opening. Be sure Camlocks engage Cam Posts, and are fully seated in Shelves and Cleats.
- 5.2 Tighten Camlocks (G) clockwise to lock.

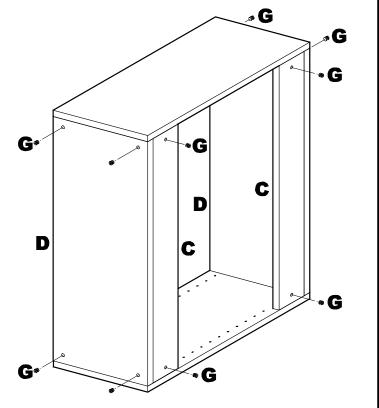




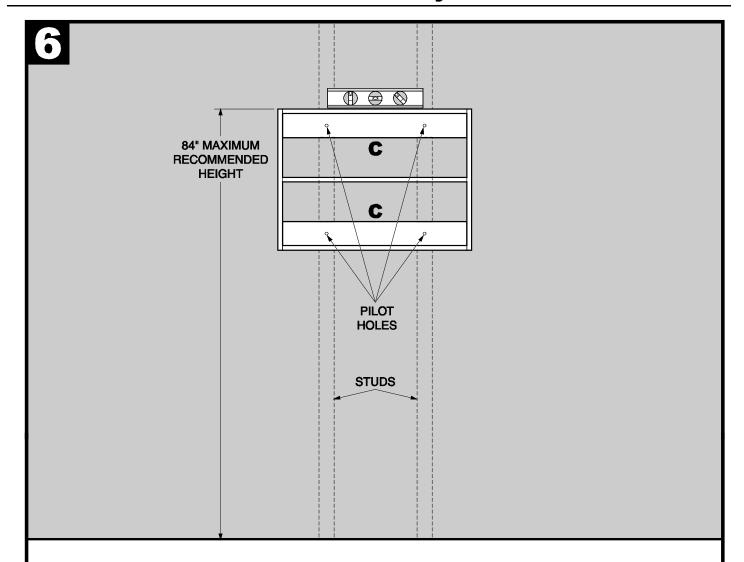

INSTALLATION


- **6.1** Determine the mounting location for the unit.
- 6.2 Using a stud finder, locate studs to which the unit will be secured. Mark stud locations with a pencil.
- 6.3 With the unit positioned at the desired location, level the unit, then drill pilot holes through Rear Hanging Cleats (C).



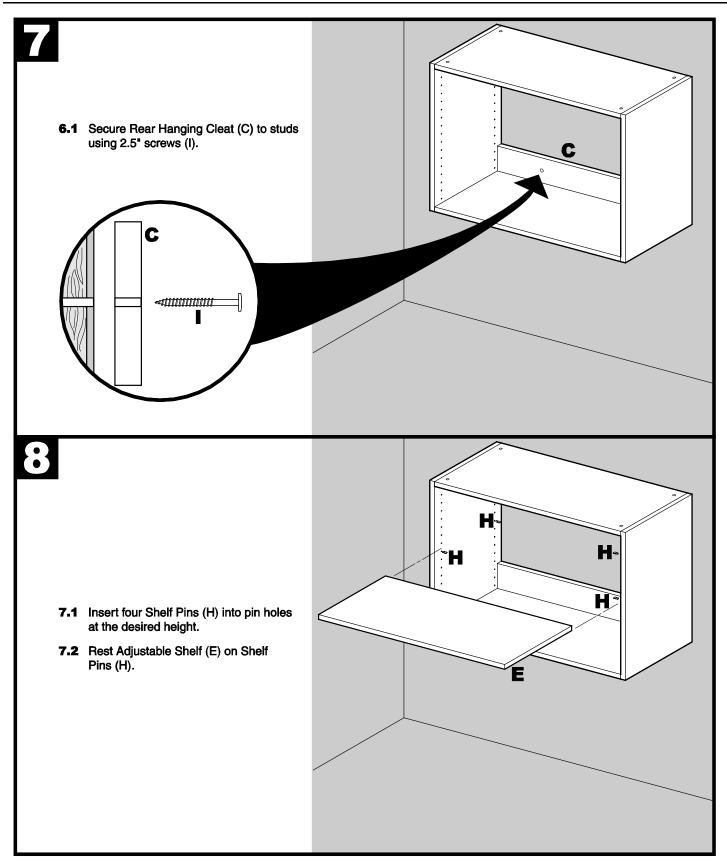



DOOR KITS

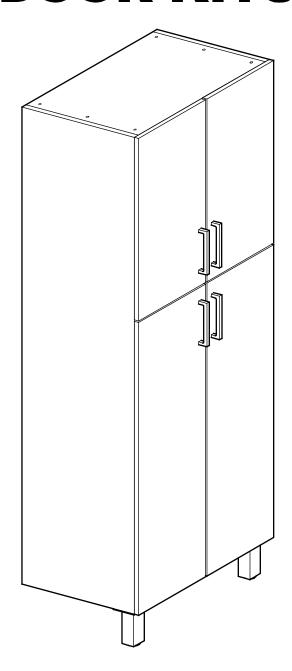



ASSEMBLY AND INSTALLATION INSTRUCTIONS


Door Kits 27





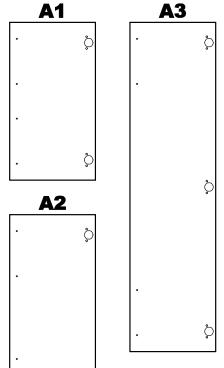

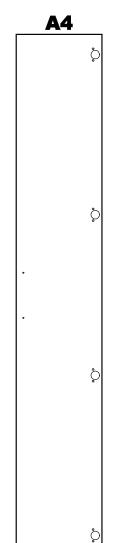

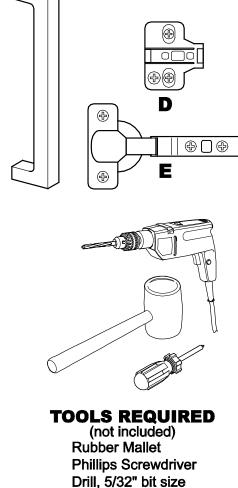

В

23" DOORS

- **A1** Door 23" X 12.5" (Qty 2)
- **B** Door Pull (Qty 2)
- **C** Screw, 1" (Qty 4)
- **D** Hinge Plate (Qty 4)
- E Hinge (Qty 4)

30" DOORS

- **A2** Door 30" X 12.5" (Qty 2)
- **B** Door Pull (Qty 2)
- **C** Screw, 1" (Qty 4)
- **D** Hinge Plate (Qty 4)
- E Hinge (Qty 4)

76" DOORS

- **A4** Door 76" X 15.5" (Qty 2)
- **B** Door Pull (Qty 2)
- C Screw, 1" (Qty 4)
- **D** Hinge Plate (Qty 8)
- E Hinge (Qty 8)

48" DOORS

- **A3** Door 48" X 12.5" (Qty 2)
- **B** Door Pull (Qty 2)
- **C** Screw, 1" (Qty 4)
- **D** Hinge Plate (Qty 6)
- E Hinge (Qty 6)

28




1B

- **1.1** Lay parts out on a protective surface to prevent damage.

 **Tip: Spread out the cardboard packaging to use as a protective surface.
- 1.2 Inventory parts against the Parts List. Make sure all parts are present before proceeding.

2

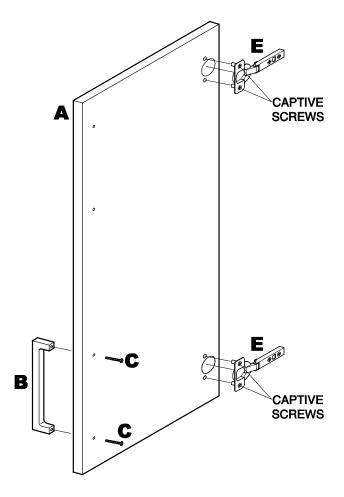


2.1 Align rear plugs and hinge cup on one Hinge (E) with recess in Door (A), then press Hinge onto Door until flush. Tighten captive screws to expand plugs and secure Hinge in place. Repeat for remaining Hinges.

If necessary, use a rubber mallet to tap hinge into place before tightening captive screws.


2.2 Install Door Pull (B) on Door (A) and secure with one 1" Screw (C).



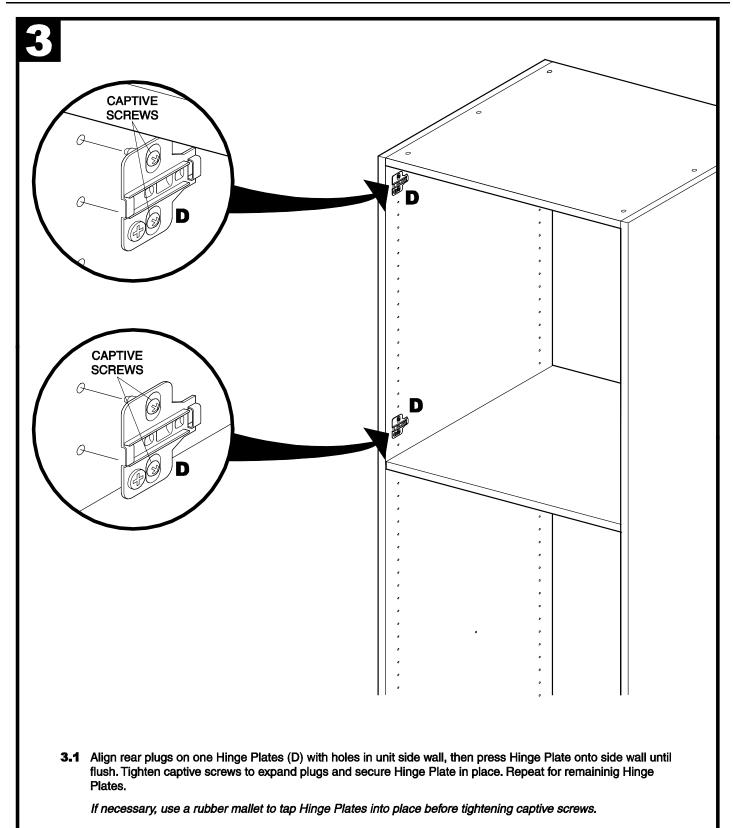

30 Door Kits




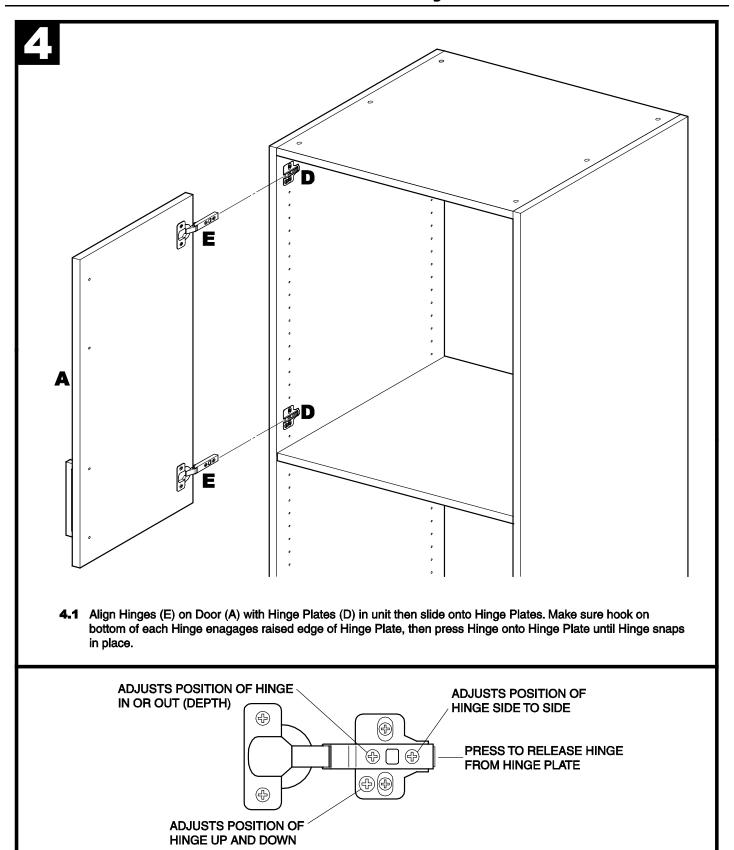

Door Kits 31




DRAWER KITS

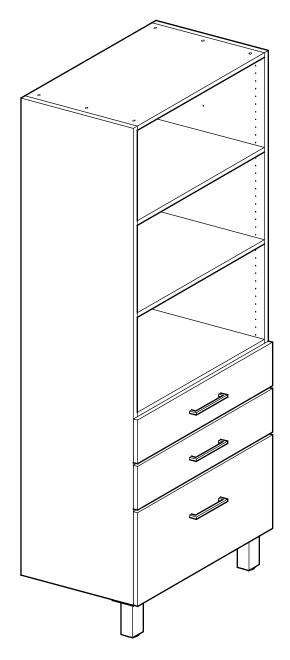

ASSEMBLY AND INSTALLATION INSTRUCTIONS



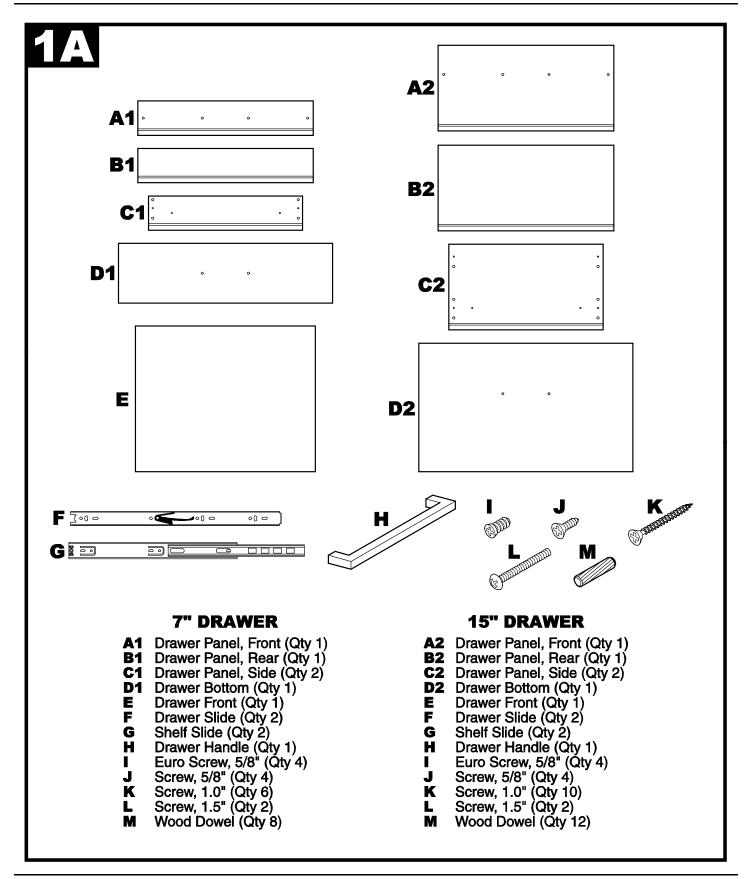



1B




NOTE: Each set of Drawer Slides (F) and Shelf Slides (G) are shipped assembled. To separate, lift the plastic catch on the Drawer Slide and pull the Slide out of the Shelf Slide.

1.1 Lay parts out on a protective surface to prevent damage. *Tip:* Spread out the cardboard packaging to use as a protective surface.

Drill, 5/32" bit size


1.2 Inventory parts against the Parts List. Make sure all parts are present before proceeding.

2

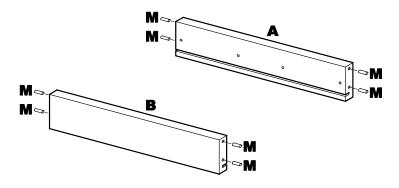


2.1 Insert Wood Dowels (M) into holes in ends of Front Drawer Panel (A) and Rear Drawer Panel (B).

3

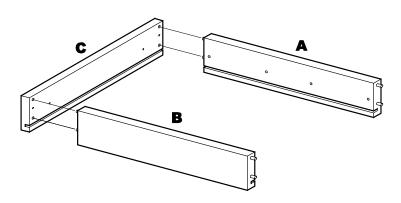

3.1 Align Wood Dowels in Front Drawer Panel (A) and Rear Drawer Panel (B) with holes in one Side Drawer Panel (C), and press components together until flush.

4

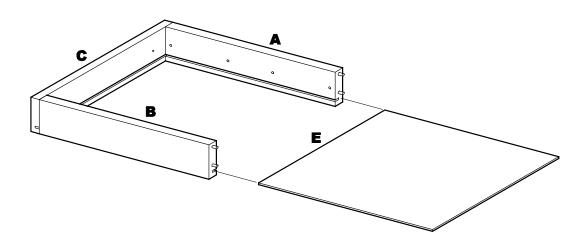


NOTE: Be sure to install Drawer Bottom (E) with finished side facing up.

4.1 Align Drawer Bottom (E) with slots in Front Drawer Panel (A) and Rear Drawer Panel (B), then slide Drawer Bottom into assembled Drawer Panels until Drawer Bottom is seated against Side Drawer Panel (C).


Drawer Kits

5

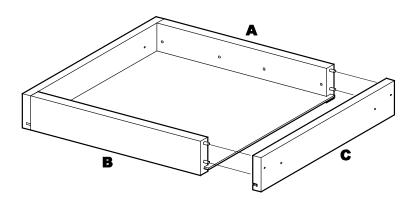


5.1 Align Side Drawer Panel (C) with Wood Dowels in Front Drawer Panel (A) and Rear Drawer Panel (B) and press Side Drawer Panel (C) onto assembled components until flush.

6

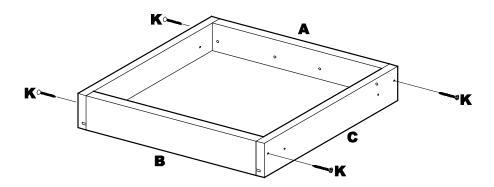


6.1 Secure Side Drawer Panels (C) to Front Drawer Panel (A) and Rear Drawer Panel (B) using 1.0" Drawer Side Screws (K).



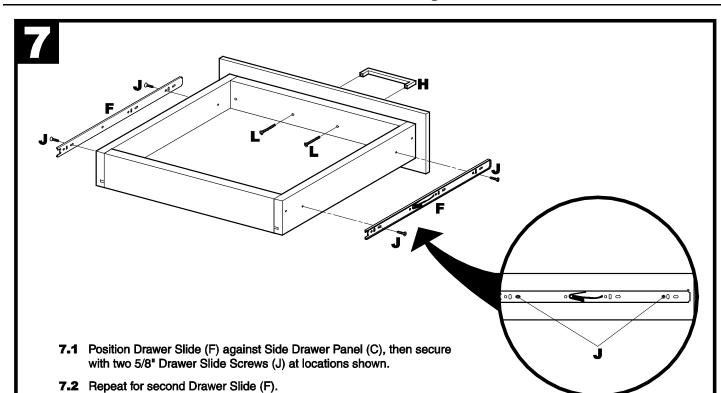

8

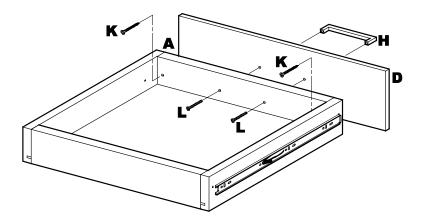


NOTE: DO NOT overtighten Screws (K) or surface of Drawer Front (D) may become dimpled.


- **8.1** Position Drawer Front (D) on assembled Drawer and secure to Front Drawer Panel (A) with 1.0" Drawer Front Screws (K).
- 8.2 Install Drawer Handle (H) on Drawer and secure with two 1.5" Drawer Knob Screws (L).

Drawer Kits



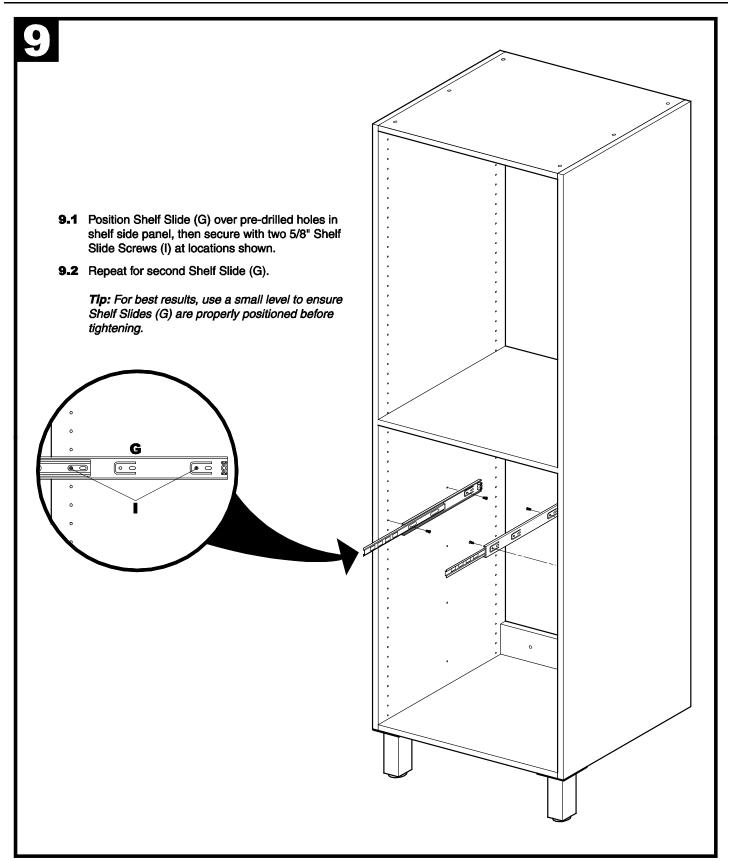



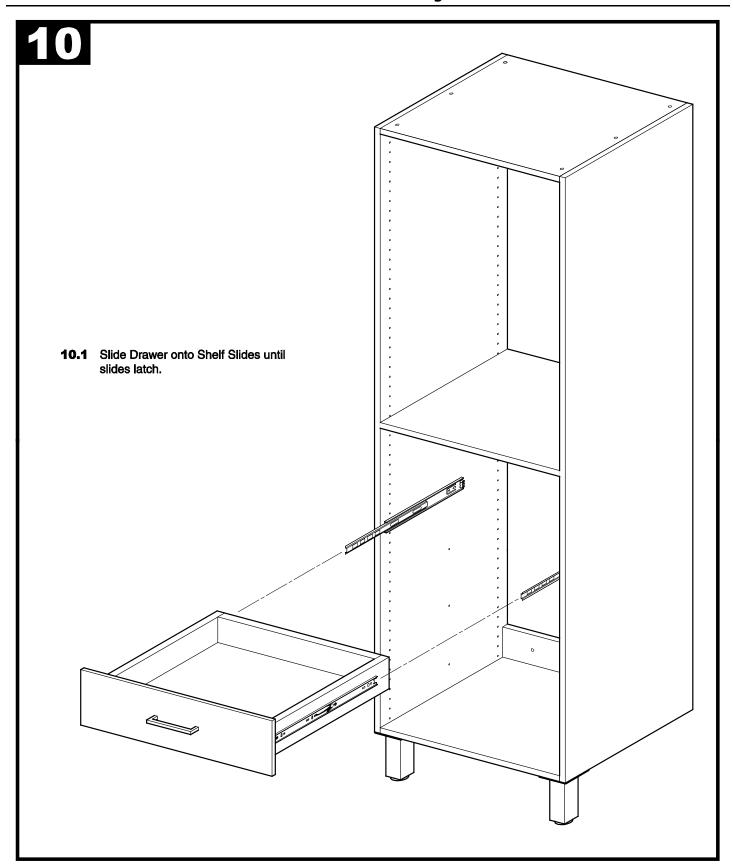


Drawer Kits 39




COUNTERTOPS

51" 57" 63" 76.5" 82.5" 88.5" 94.5"

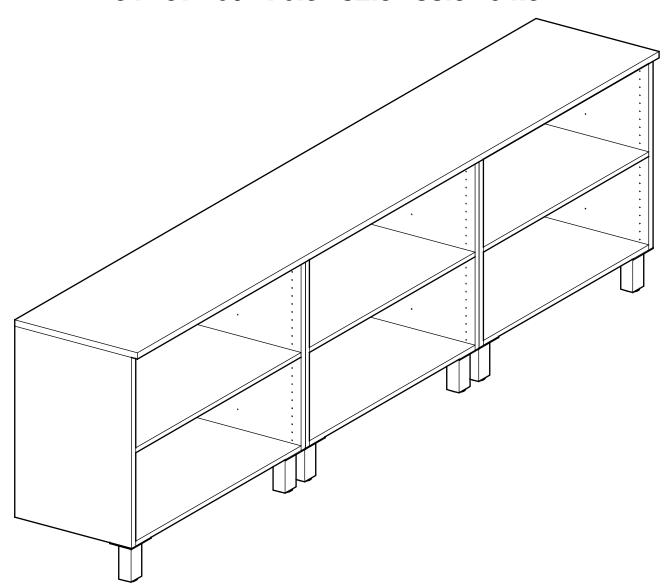

ASSEMBLY AND INSTALLATION INSTRUCTIONS



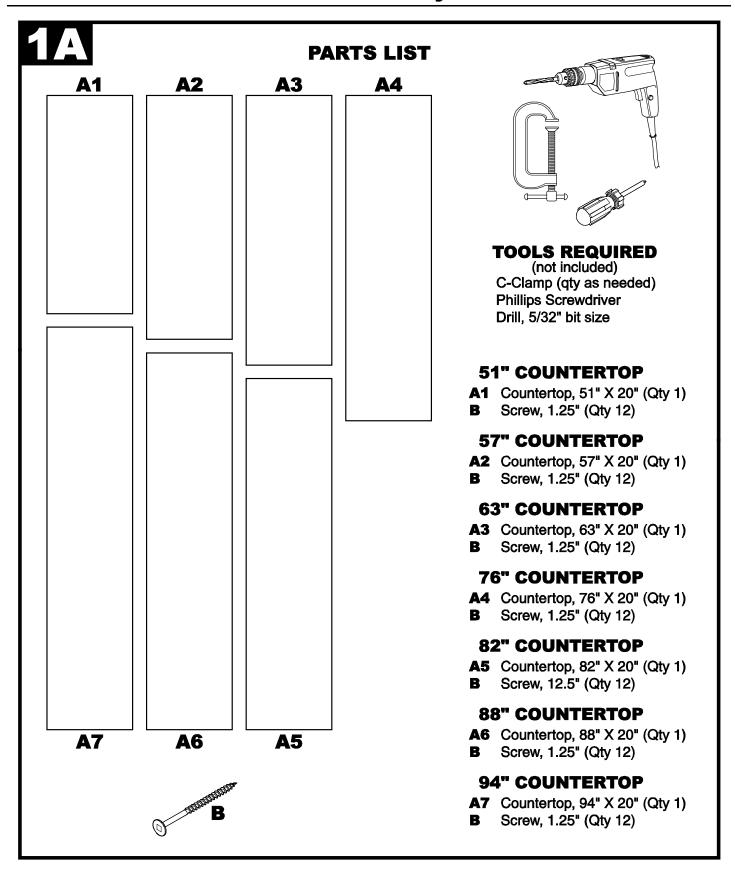




1B

- **1.1** Lay parts out on a protective surface to prevent damage. *Tip:* Spread out the cardboard packaging to use as a protective surface.
- 1.2 Inventory parts against the Parts List. Make sure all parts are present before proceeding.

2

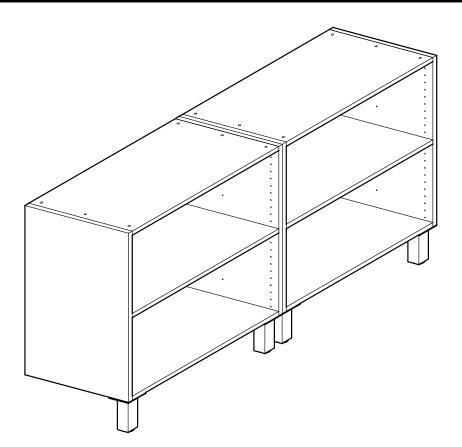


2.1 Assembly and install Garage Base units as appropriate for countertop size (see table below).

COUNTERTOP LENGTH	BASE A	BASE B	BASE C
51"	25.5"	25.5"	
57"	25.5"	31.5"	
63"	31.5"	31.5"	
76.5"	25.5"	25.5"	25.5"
82.5"	25.5"	25.5"	31.5"
88.5"	31.5"	31.5"	25.5"
94.5"	31.5"	31.5"	31.5"






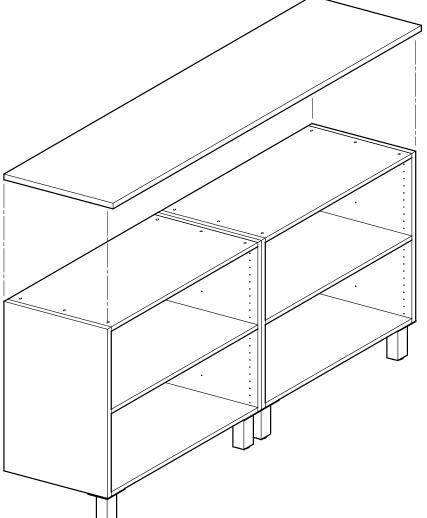


- 3.1 Place countertop on top of installed Garage Base units.
- **3.2** Align countertop with rear and side edges of Garage Base units, the clamp countertop to each Garage Base unit to prevent movement.

Place a soft cloth or thin piece of cardboard between the clamp and the countertop to prevent damaging the countertop finish.

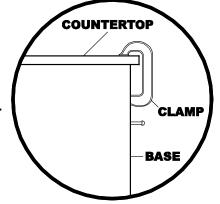



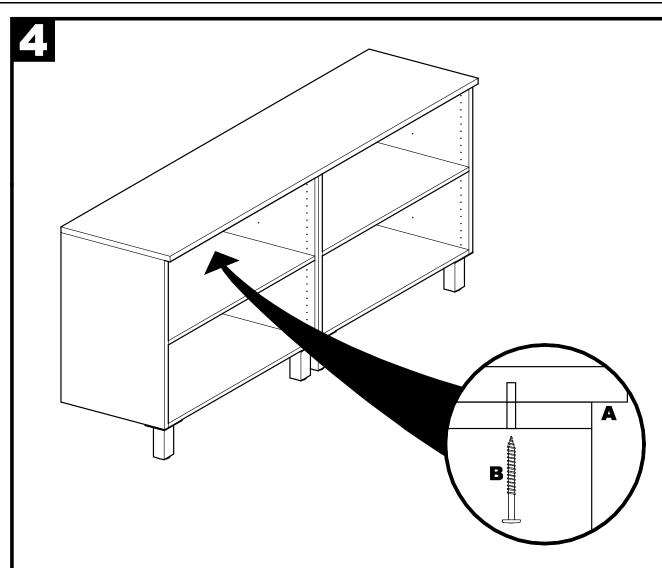

- **4.1** From inside each Garage Base unit, drill six 1.25" deep holes through top of Garage Base unit and into Countertop (A). See template below for approximate hole placement.
- 4.2 Secure Countertop (A) to Garage Base unit using six 1.25 inch scres (B) for each Base unit.

DRILLING TEMPLATE

· · · · ·